

# GoSilent Cube – Quick Start Guide

The portable security appliance that fits in your pocket

GoSilent Cube is a VPN and Firewall that **protects** all **internet activity** ensuring you and the data you access are safe.



## What's in the box?



## One Time Initial Setup

### 1) Choose your connection method


#### WiFi Only

- Plug the two WiFi adapters (included) into USB ports labeled "Internet" on your GoSilent Cube
- Proceed to Step 2




#### Ethernet / WiFi

- Plug one WiFi adapter (included) into one of the USB ports labeled "Internet" on your GoSilent Cube
- Plug one end of an ethernet cable (not included) into the ethernet port labeled "Device" on your GoSilent Cube
- Plug the other end of the ethernet cable into the ethernet port on your device (i.e. laptop, computer, etc.)
- Proceed to Step 2

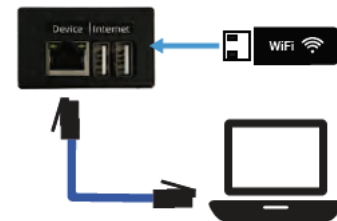

#### Ethernet Only

- Plug the USB to Ethernet adapter (included) into one of the USB ports labeled "Internet" on your GoSilent Cube
- Plug one end of "Ethernet 1" (not included) into your router / internet source and the other end into the USB to Ethernet adapter
- Plug one end of "Ethernet 2" (not included) into the Ethernet port labeled "Device" on your GoSilent Cube
- Plug the other end of "Ethernet 2" into your device (i.e. laptop, computer, etc.)
- Proceed to Step 2

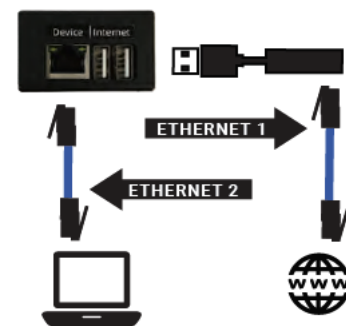

### 2) Power up GoSilent Cube

- Use the Micro USB to USB cord (included) to plug your GoSilent Cube into a power source. GoSilent Cube can be powered by the included wall plug or a computer's USB port
- Wait approximately 30 seconds for GoSilent Cube to power up



## Initial Setup Continued

### 3) Find your GoSilent Cube's WiFi Name

Note: If you choose Ethernet/WiFi or Ethernet Only for your connection method, skip to Step 5

Identify your GoSilent Cube's serial number beginning with "SN: C..." on the side of your GoSilent Cube. The serial number will appear as an available WiFi

If the GoSilent Cube's WiFi name has been pre-configured for you, please find the name provided by your system administrator in your device's available WiFi network list



### 4) Connect to your GoSilent's WiFi Network

Note: If you choose Ethernet/WiFi or Ethernet Only for your connection method, skip to step 5

If the GoSilent Cube's WiFi password has been pre-configured for you, please enter the password provided by your system administrator

Otherwise, connect to the GoSilent Cube WiFi using the default password "gosilent"

Password: gosilent

Note: It is recommended that you change the WiFi password from the default password

5) Open any of our approved browsers (Edge, Chrome, or Firefox) and navigate to <https://setup.gosilent>



6) You will be prompted that the server certificate is untrusted. Click the Advanced or Details option and then click on "Proceed to setup.gosilent", "Accept Risk and Continue", or "Go on to the webpage"

For more information about the server certificate is untrusted warning, see the Frequently Asked Questions on the Attila Security website (<https://attilasec.zendesk.com>).

Note: You may need to scroll down to view this message on your browser.

ADVANCED

7) Log in using the password "gosilent" and scroll down to accept the term of use

gosilent

8) You will be prompted to create a new password



### 9) For WiFi:

Click on the WiFi icon and a list of available WiFi networks will appear. Choose the WiFi network you wish to use and enter the WiFi password.

### For Ethernet:

Click on the Ethernet icon. Click on the save configuration button.

If you would like to use static ethernet, please contact your system administrator



10) Choose "Import Enrollment Bundle", click the "Upload File" box, navigate to and select enrollment bundle, enter the enrollment bundle password and click "Import Bundle" button. (To use the mass enrollment bundle, please contact your system administrator for the required information)

11) Once in the dashboard, look for bell or a gear in the top right corner to check for a software update.



If there is red "1" in the bell, click it and select download. After the download is complete, you will be prompted to install the update by clicking "Install Now" or clicking the gear with the red "1"  
If there is a red "1" in the gear, click it and select "Install Now"



NOTE: DURING THE SOFTWARE UPDATE DO NOT REMOVE POWER FROM YOUR GOSILENT OR NAVIGATE AWAY FROM GOSILENT CUBE'S CONSOLE IN YOUR BROWSER FOR APPROXIMATELY 30 MINUTES.